

Bianca Bathroom Accessories

Versions:202506

Finish



Chrome



Gun Metal



Brushed Nickel



Matte Black



Brushed Gold




Brushed Bronze

Bianca Bathroom Accessories


ROBE HOOK

NR9082CH / NR9082MB / NR9082BN
NR9082GM / NR9082BG / NR9082BZ

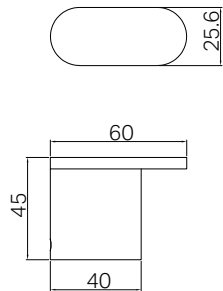


SINGLE TOWEL RAIL 600MM

NR9024CH / NR9024MB / NR9024BN
NR9024GM / NR9024BG / NR9024BZ

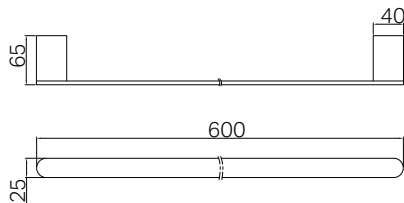


TOILET ROLL HOLDER

NR9086CH / NR9086MB / NR9086BN
NR9086GM / NR9086BG / NR9086BZ

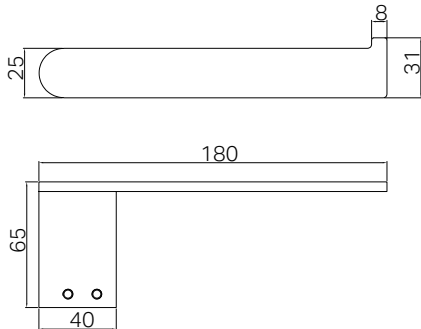


DOUBLE TOWEL RAIL 600MM

NR9024dCH / NR9024dMB / NR9024dBN
NR9024dGM / NR9024dBG / NR9024dBZ

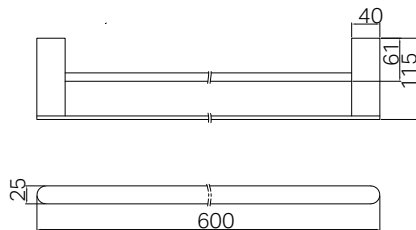


TOILET ROLL HOLDER WITH PHONE HOLDER

NR9086aCH / NR9086aMB / NR9086aBN
NR9086aGM / NR9086aBG / NR9086aBZ

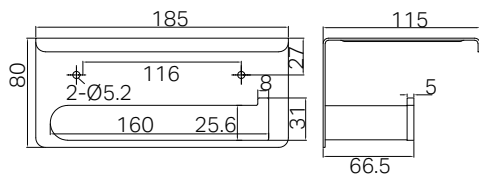


SINGLE TOWEL RAIL 800MM

NR9030CH / NR9030MB / NR9030BN
NR9030GM / NR9030BG / NR9030BZ

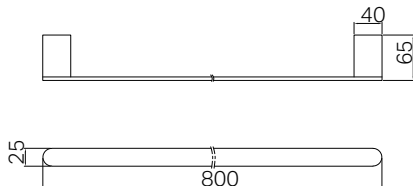


HAND TOWEL RAIL

NR9080CH / NR9080MB / NR9080BN
NR9080GM / NR9080BG / NR9080BZ

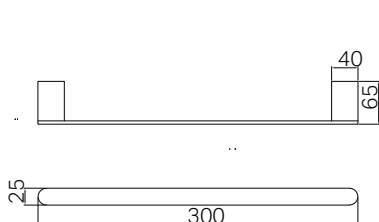


DOUBLE TOWEL RAIL 800MM

NR9030dCH / NR9030dMB / NR9030dBN
NR9030dGM / NR9030dBG / NR9030dBZ

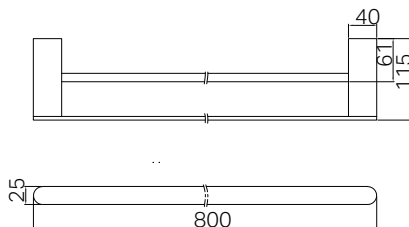


METAL SHOWER SHELF

NR9087aCH / NR9087aMB / NR9087aBN
NR9087aGM / NR9087aBG / NR9087aBZ

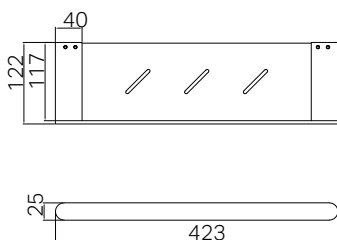

SOAP DISH HOLDER

NR9081CH / NR9081MB / NR9081BN
NR9081GM / NR9081BG / NR9081BZ

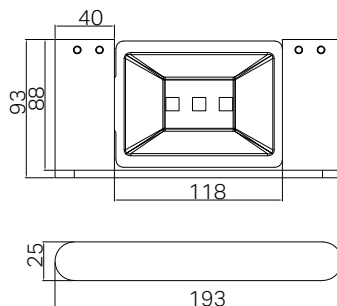


GENERAL INSTRUCTIONS AND WARNINGS

- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.
- Ensure all measurements are accurate before drilling holes to prevent misalignment of the accessories.


MAINTENANCE AND CARE

- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.


Installation Instruction

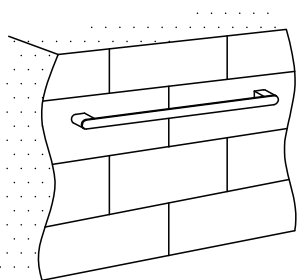


1. Place the accessories in the desired installation position.
Use a level to ensure the accessories is horizontal.
Mark the positions directly below the bases with a marking pen.

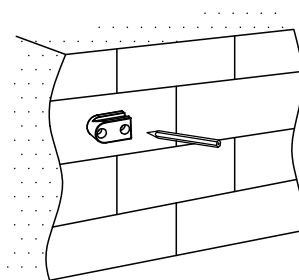


2. Position the fixing blocks at the marked spots.
Mark the drilling points through the fixing block holes.

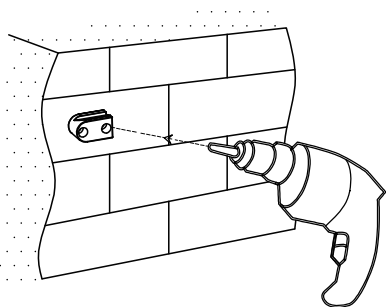


3. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

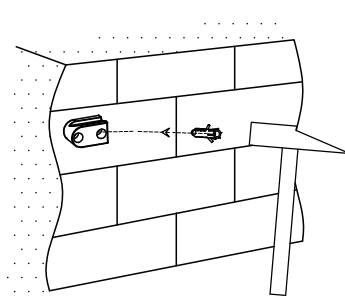

4. Insert the expansion plugs into the drilled holes using a hammer.

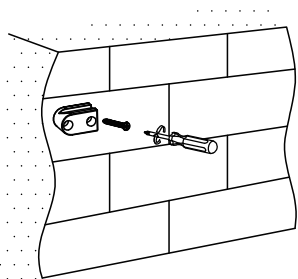


5. Place the fixing block covers over the holes and secure them firmly with expansion screws.

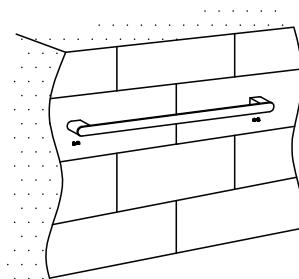


6. Install the accessories by tightening the grub screws.


Toilet Roll Holder With Phone Holder Installation Only

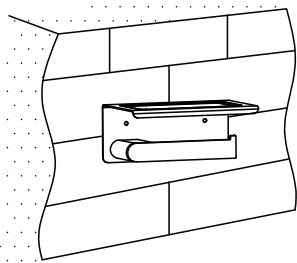


1. Place the toilet roll holder in the desired installation position. Use a level to ensure the toilet roll holder is horizontal. Mark the positions with a marking pen at the holes.

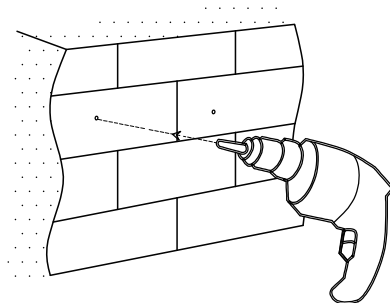

2. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

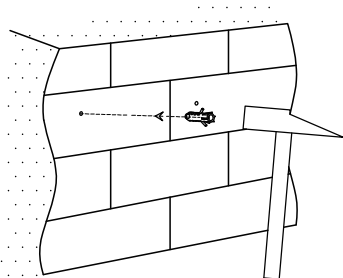

3. Insert the expansion plugs into the drilled holes using a hammer.

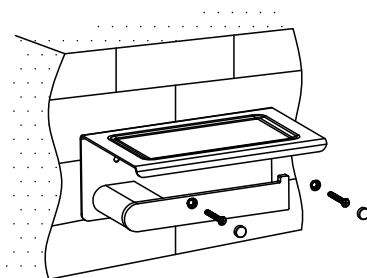

4. Place the toilet roll holder by securing it firmly with expansion screws, and then insert the caps into screw holes.

Nero

