



# Mecca 2 In 1 Twin Shower

Nero

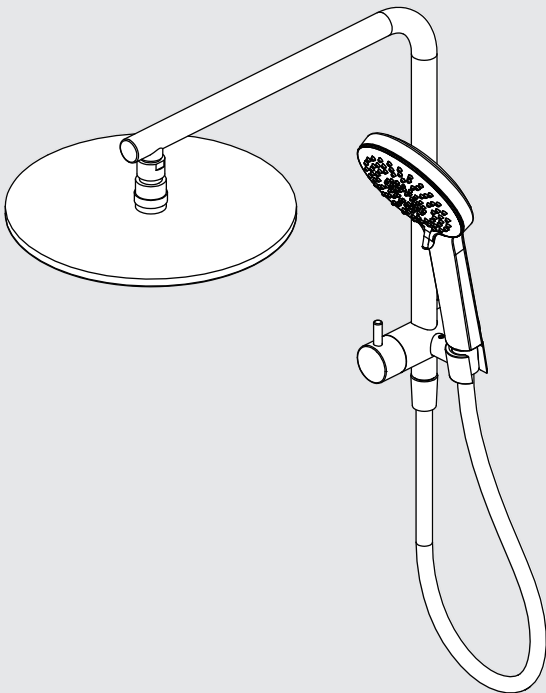

Versions:202506

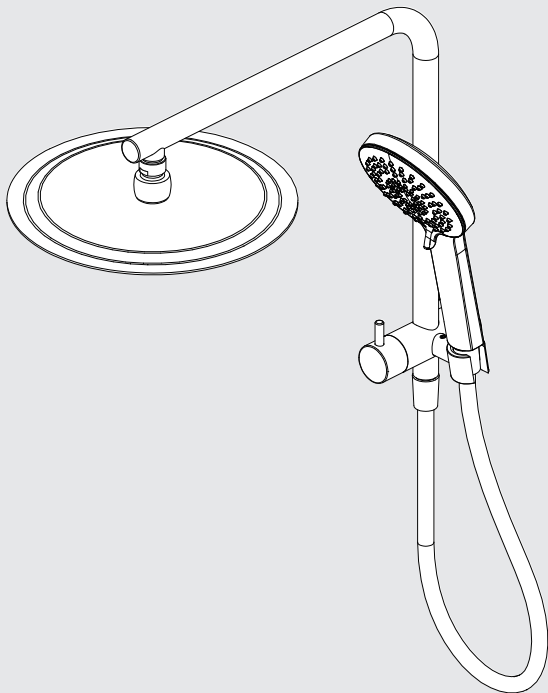

**Drawing**

**Specifications**

**Watermark License**  
WM-060093

**Temperature Rating**  
Min 1°C-Max 75°C

**Pressure Rating**  
Min 150kpa - Max 500kpa

**Finish & SKU**

Chrome  
NR250805eCH

**Packaging Includes**

1x Shower Arm  
1x Shower Rail  
1x Shower Head  
1x Hand Shower (Built- In Check Valve)  
1x 1.5m PVC Hose  
1x Installation Kit

\*Dimensions are nominal measurements only.  
\*\*Dual-check valve pre-installed.

**Drawing**

**Specifications**

**Watermark License**  
WM-060093

**Temperature Rating**  
Min 1°C-Max 75°C

**Pressure Rating**  
Min 150kpa - Max 500kpa

**Finish & SKU**

Gun Metal NR250805eGM    Brushed Nickel NR250805eBN  
Matte Black NR250805eMB    Brushed Gold NR250805eBG

**Packaging Includes**


1x Shower Arm  
1x Shower Rail  
1x Shower Head  
1x Hand Shower (Built- In Check Valve)  
1x 1.5m PVC Hose  
1x Installation Kit

\*Dimensions are nominal measurements only.  
\*\*Dual-check valve pre-installed.


# Installation Instruction

## GENERAL INSTRUCTIONS:


- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.

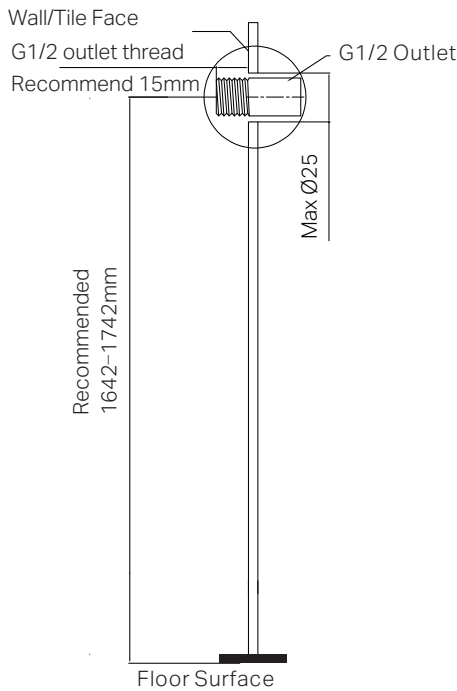


1. Ensure the G1/2 outlet thread extends 15mm beyond the finished wall or tile surface, trim the thread if necessary to achieve this length.  
Height for the water inlet is 1642-1742mm from the finished floor surface.




2. Apply the G1/2 water outlet connection with Teflon tape to ensure a watertight seal.  
Screw the adapter onto the prepared outlet thread.

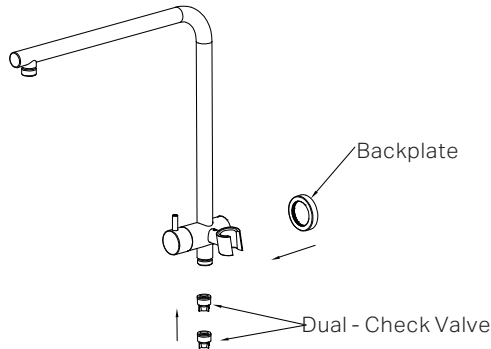


3. Slide backplate onto diverter, and attach the diverter to the water inlet, and position the shower arm, then screw it in place.  
Note: Dual-check valve are pre-installed in the shower arm.

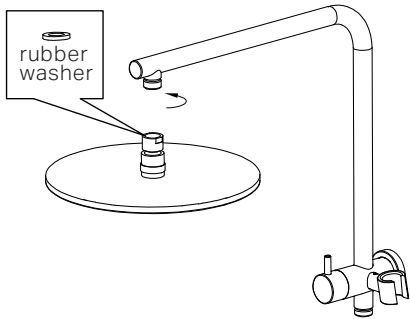

4. Thread the overhead shower head onto the shower arm, ensuring a tight connection.

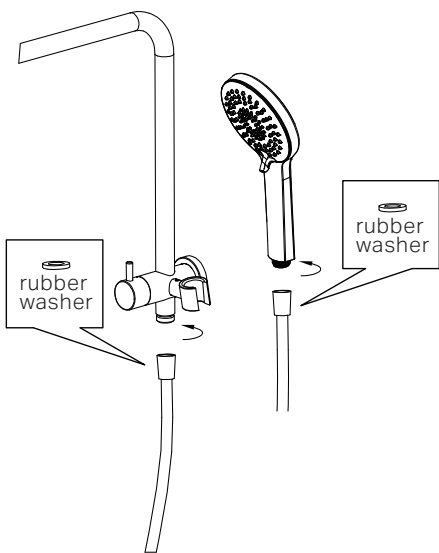

5. Attach the hand shower to the hose and connect the hose to the shower arm, ensuring that rubber washers are in place at both connection points to prevent leaks.

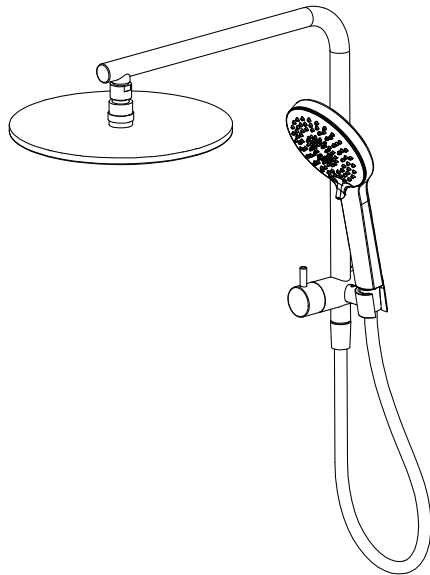

6. Confirm that all connections are securely tightened, then activate the drainage system and turn on the water supply.  
Inspect all connections for any signs of leakage.

## MAINTENANCE AND CARE:

- Regularly check the shower system and all connections for signs of wear or leaks.
- Clean all shower components with mild soapy water to maintain their appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Descale the showerhead, hand shower, and other components periodically to prevent mineral buildup, which can affect water flow and performance.
- Inspect and replace any worn-out parts, such as seals or washers, to ensure the longevity and efficiency of the shower system.
- Ensure all moving parts, such as adjustable brackets or sliding rails, are functioning smoothly and are properly lubricated if necessary.

## FINAL INSPECTION:

- Ensure the shower operates smoothly and that there are no leaks at the connections.
- Verify that the water temperature and flow are consistent and as desired.
- Clean the area and the newly installed shower with a soft cloth to remove any installation residues.